


# AC2 CONTROLLER

- 1.3 Inch OLED Display
- Master Volume Adjustment
- Bass Volume Adjustment
- One Button Mute
- Audio Source Selection
- Preset Scene Calling
- Interface Mode: RJ11

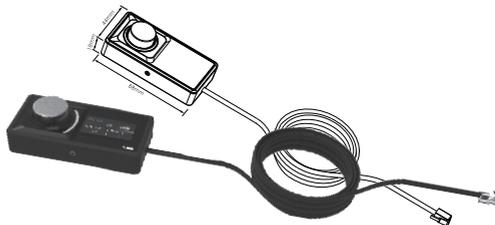

## 1. AC2 CONTROLLER OPERATION INSTRUCTIONS

### A. Boot Screen

When the unit is turned on, the boot screen will be shown as below in Figure 1.



Figure 1

### B. Main Interface

Once the startup process is completed, the main interface of the controller will be shown as in Figure 2.

The volume can be adjusted by rotating the controller knob. Turning the knob on a clockwise direction increases the volume, while a counterclockwise direction decreases the volume. The range of volume adjustment is from 0 to 66.

During the main interface, you can depress the knob to mute the unit.



Figure 2-1



Figure 2-2

### C. Input Source Selection

Press and hold the knob while the unit is on the main interface to enter the input source interface, as shown below in Figure 3. By rotating the knob in this interface, you can select the input source. Press and hold the knob again to exit this interface and return to the main interface.



Figure 3

### D. Bass Volume Adjustment

Press the knob to enter the bass volume interface. As shown below in Figure 4, the knob can adjust the bass level. Turning the knob on a clockwise direction increases the volume, while a counterclockwise direction decreases the volume. The range of volume adjustment is from 0 to 66. Press and hold the knob again to exit this interface and return to the main interface.



Figure 4

## E. Preset Sound Effect Call

Press the knob again to enter the preset sound effects interface, where you can select the desired effect using the knob and depressing it to confirm your selection.



Figure 5-1

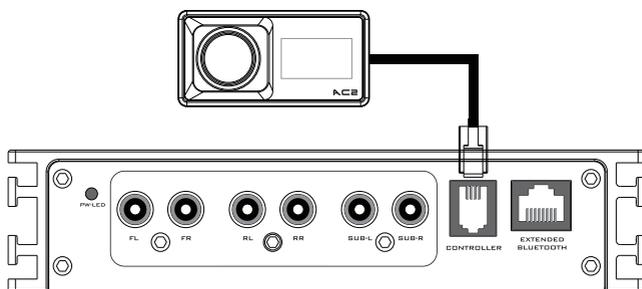


Figure 5-2


Once the selection is completed, the unit will automatically exit to the main interface. To exit to the main interface without making a selection, depress the knob while it is on the ESC setting.

Note: If the controller has not performed any function for approximately 18 seconds, the controller will exit the current interface and retain to the main interface.


## 2. THE CONNECTION DIAGRAM




## 3. BRACKET INSTALLATION DIAGRAM

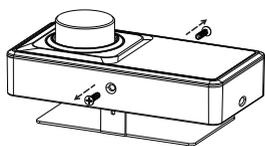

1.Remove the bracket from the remote control

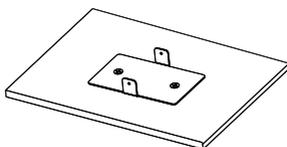

2. Fix the bracket to the car

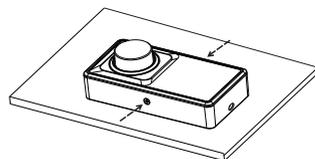

3.Fix the controller on the bracket

## 4. PRODUCT PARAMETERS

Supply Voltage	5V
Product Size	88(L)*44(W)*17(H)mm
Product Weight	Approx 0.13kg
Packing Box	140(L)*110(W)*56(H)mm

## 5. PACKAGE CONTENTS

AC2 Controller	1 pc
Manual	2pcs (Chinese/ English)
Screw	2pcs
Velcro	2pcs